



Earmuff Fitting Instructions

Keys to Successful Hearing Protection with Earmuffs

Wear

- Read and follow all earmuff fitting instructions
- Remove all hair underneath ear cushions

Selection


- Avoid overprotection in minimal noise environments – in selecting the best earmuff for your situation, consider noise levels and your need to communicate with co-workers or hear warning signals on the job

Maintenance

- Regularly inspect earcups and ear cushions for cracks and leaks – discard if earcups are visibly damaged or compromised
- Clean earcups and ear cushions regularly with mild soap and water
- Replace ear cushions and foam inserts every 6-8 months under normal wear, every 3-4 months with heavy use or in humid/extreme climates

Headband	Folding	Multiple-Position	Cap-Mounted	Neckband
 <p><i>Thunder® T3</i></p> <p>1  Place earcups over each ear.</p> <p>2  Adjust the headband by sliding the headband up or down.</p>	 <p><i>Leightning® L2F</i></p> <p>1  2  Fold out the earcups as shown.</p> <p>2  Place earcups over each ear.</p> <p>3  Adjust the headband by sliding the headband up or down.</p>	 <p><i>Viking™ V3</i></p> <p>1  Place the earcups over each ear.</p> <p>2  Adjust the headband by sliding the headband up and down.</p> <p>3  Multiple-Position earmuffs can be worn either over-the-head, behind-the-head or under-the-chin.</p> <p>3  When the earmuff is worn with the headband behind-the-head or under-the-chin, the headband strap must be attached to the slot in the upper part of the earcup as shown.</p>	 <p><i>Clarity® C3H</i></p> <p>1  Attach adapters to each side of the hard hat by sliding them into the slots.</p> <p>2  Attach each earmuff into its adapter by sliding the earmuff housing down into the adapter.</p> <p>3  Place the hard hat on the head and adjust the earmuffs by sliding the cups up and down.</p> <p>4  Ensure that the earmuff is firmly attached by lifting the arm up and down.</p>	 <p><i>Leightning® L1N</i></p> <p>1  2  Adjust the length of the headband strap between the earcups so the earmuff fits well on top of the head.</p> <p>2  Place earcups over each ear.</p>

Do's + Don'ts of Wearing Bilsom® Earmuffs

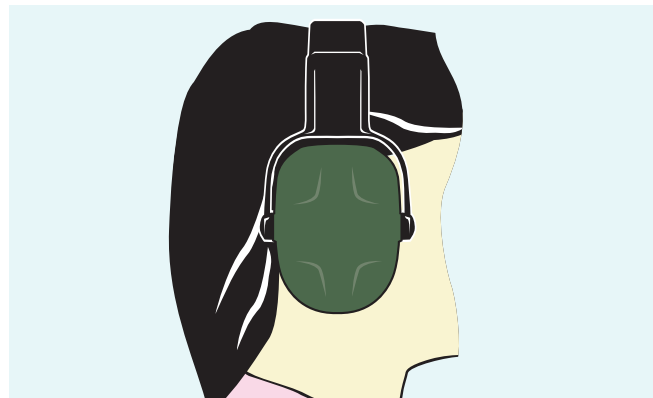

Firm Seal
Do seal the cushions firmly against the head.



Avoid Obstructions
Do not allow hair to obstruct the ear or the earmuff's secure fit in any way.



Cover Ear Completely
The earcups should never fit crooked or askew over the ear.

Bacou-Dalloz Hearing Safety Group
7828 Waterville Road, San Diego, CA 92154
Tech Support ph. 800/977-9177 • fax 619/661-8131
Cust Service ph. 800/430-5490 • fax 401/232-1110
www.hearingportal.com

Bilsom®

DISCLAIMER: If the above-mentioned recommendations are not followed, the protection and function afforded by the earmuffs may be severely impaired. This may cause consequences for the user for which Bacou-Dalloz can not be held responsible. Bacou-Dalloz can not guarantee that any type of warning signals including communication with other people in the surroundings can be heard and understood by the wearer of this hearing protector. The sound level and the frequency content of the warning signals as well as of the background noise can vary in different situations.

⚠️ WARNING: All hearing protection affords limited protection. The user is responsible for the proper selection, use, care and maintenance of this device. Improper selection (including underprotection), use or maintenance may lead to serious hearing loss. If there are any questions concerning this product contact your safety supervisor or Bacou-Dalloz.

HF501 RP1 11/05